

DEFY WOOD CLEANER

PRODUCT NAME

DEFY Wood Cleaner

MANUFACTURER: SaverSystems

Richmond, IN 47374

800-860-6327

Fax 765-935-4999

www.saversystems.com

DESCRIPTION

DEFY Wood Cleaner is a powdered concentrate that is mixed with water. It is an environmentally friendly product that safely cleans, brightens, and restores the natural beauty of exterior wood. This product also cleans weathered composite lumber, removing mold, mildew and algae along with the silver gray color that can develop over time. Restores wood and wood composites to their original appearance. DEFY Wood Cleaner is also an excellent choice for cleaning vinyl and aluminum siding as well. Unlike chlorine bleach based cleaners, DEFY Wood Cleaner is biodegradable and will not harm wood fibers, pets, grass, or most plants.

USES

DEFY Wood Cleaner removes dirt, grime, mildew stains, and weathered graying from horizontal and vertical wood surfaces. It is recommended for surface preparation prior to application or reapplication of clear finishes and stains. For best results use SaverSystems water repellent wood finishes. Note: DEFY Wood Cleaner will darken redwood. Use DEFY Wood Brightener to restore redwood to its original color or as a neutralizer to further brighten other wood species that have been cleaned with DEFY Wood Cleaner.

BENEFITS

- Restores the natural beauty of wood
- Contains no acid or chlorine bleach
- Safe for plants and animals
- Biodegradable

DIRECTIONS FOR USE

Use 6 ounces (3/4 cup) of DEFY Wood Cleaner powdered concentrate with each gallon of water.

STEP 1: MIX: Mix with water and stir thoroughly until powder is mostly dissolved. Powder dissolves faster in warm water. Solution should be used within six hours of mixing.

STEP 2: APPLY: Horizontal Surfaces: Dampen surface with water before application. Apply DEFY Wood Cleaner solution with sprayer, brush, or mop, working on small areas, (20-30 sq. ft.) at a time.

Vertical Surfaces: Dampen surface with water before application. Apply with a sprayer working on small areas at a time. Begin at the bottom and work to the top.

STEP 3: BRUSH: Horizontal Surfaces: Let solution stand approximately 15-20 minutes, keeping area wet with additional DEFY Wood Cleaner solution. Thoroughly scrub with a stiff, short bristle broom or brush.

Vertical Surfaces: Let solution stand approximately 15-20 minutes, keeping surfaces wet with additional solution. Thoroughly scrub with a stiff, short bristle broom or brush working from bottom to top. DEFY Wood Cleaner will open wood pores and some raising of wood fibers may occur.

STEP 4: RINSE: Rinse thoroughly with water from hose or pressure washer using lowest pressure that cleans without damaging the wood. Repeat steps 2-4 on next small area. Rinse cleaned area of vertical surfaces to avoid streaking as work progresses. Allow wood surfaces to thoroughly dry before applying SaverSystems water repellent wood finishes. Heavily weathered or soiled surfaces may require a second application. Coverage: One gallon of DEFY Wood Cleaner cleans and restores 100-200 square ft. depending on wood porosity.

STEP 5: NEUTRALIZE: While still wet after cleaning the entire project, neutralize wood by using DEFY Wood Brightener. This is an essential step before staining.

CAUTIONS

Keep out of reach of children! Do not take internally. Avoid contact with eyes and skin. Avoid breathing mist. Close container tightly after each use. Do not re-use containers.

Contains sodium carbonate peroxyhydrate. Do not mix with chlorine bleach or other chemicals. Store in original container only. Sweep up spills and flush down drain. Contact with combustible organic materials may cause fire. Accumulation of product on ladders, scaffolding, decks, etc., may result in a slippery surface. Avoid contact with eyes and mucous membranes and prolonged contact with skin.

First Aid: In case of eye contact, flush with water for 15 minutes and get prompt medical attention. If swallowed, give milk or water. Do not induce vomiting. Call a physician immediately.

LIMITED WARRANTY

SaverSystems warrants this product to be free from defects for six months from date of purchase. Any claim must be made in writing, accompanied by proof of purchase. We will only be obligated to replace the product or refund the purchase price. There is no other express warranty.

SaverSystems shall not be liable for incidental or consequential damages resulting from any breach of this warranty and fitness for use. Some states do not allow the exclusion of incidental or consequential damages, so the above warranty may not apply to you. This warranty gives you specific legal rights. You may also have other rights, which vary, from state to state.

PACKAGING

DEFY Wood Cleaner is available in 2.25 lb. and 10 lb. recyclable plastic containers. The 2.25 lb. container of concentrate will make 6 gallons of DEFY Wood Cleaner; the 10 lb. container will yield 26 gallons.

TRANSPORT AND STORAGE

DEFY Wood Cleaner is not considered hazardous under Department of Transportation regulations. Do not stack pallets. Store in cool, dry area.